




WOODCHUCKS CABINET MOULDING

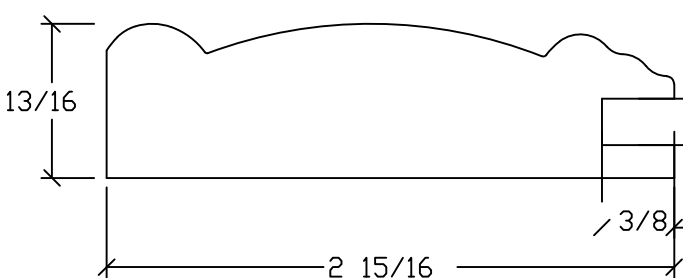


CM0001-00

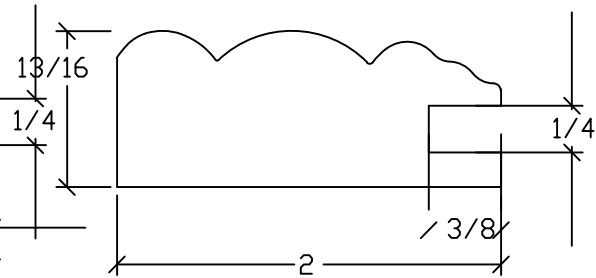


CM0001-01

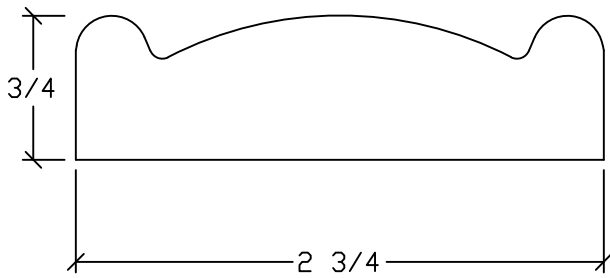


CM0002-00

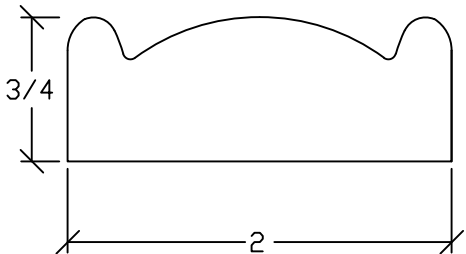


CM0002-01

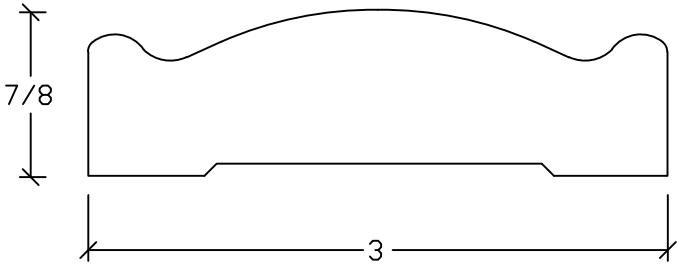


CM0002-02

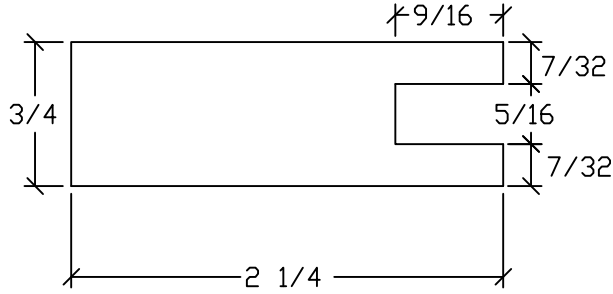


CM0003-00



CM0004-00

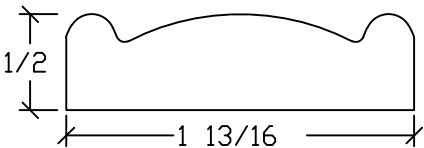

CM0005-00

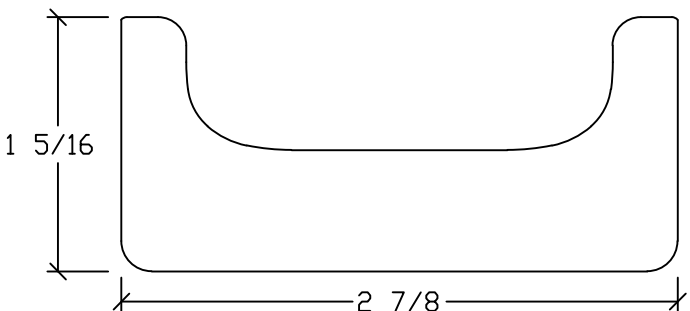

CM0006-00